

T.I. no.: 2018 - 28 Updated: -	Topic: SC Soul Software 3.8.3
---	--------------------------------------

Date: 19.11.2018	Priority	Need for action
Affected machines: SC Soul	High	As soon as possible
From serial number: 1847../	Medium	On next visit to the machine
As of date: -	X Low	X FYI only

NEW FUNCTIONS AND IMPROVEMENTS

New functions:

- Hardware detection has been divided up into two steps during commissioning to make for a better overview.
- Event display in self-service mode
- The coffee water boiler has been renamed the hot water boiler to prepare for the 3 kW version.
 - 2 kW machine equipment: Hot water boiler and steam boiler
 - 3 kW machine equipment: Hot water boiler, steam boiler and also the coffee water boiler.
- The modem type is shown in the QuickInfo window.
- In the bootloader, the [Copy Dump to USB] field replaces the previous [Copy Logs] field.


Improvements:

- The steam boiler is also heated correctly after long periods of cooling (e.g. due to removed grounds drawer).
- Rotation pump (water) statistics are recorded correctly.
- If the payment is not recorded correctly in the "always idle" mode, the beverage is cancelled directly.
- The brewing chamber is drained after rinsing.
- Falsified pressure display during brewing pressure calibration fixed. Boilers are deactivated before calibration.
- Excessive pressure during dispensing of cold water fixed.
- ZH-TW translation revised.
- Various texts revised.


Event display in self-service mode

In [Self-service mode], a pop-up window is displayed if there is an error. This window informs the customer that no beverages can be dispensed or that the current beverage is being cancelled. This is general information. The specific error (e.g. empty water tank) is displayed in the Operator menu.


Pop-up window during beverage dispensing.

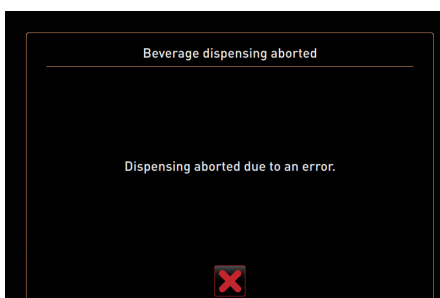

Beverages remain locked after the error message is cancelled.

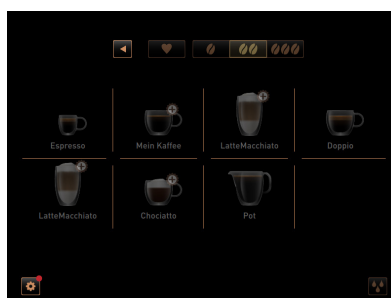

The error is displayed in the Operator menu.

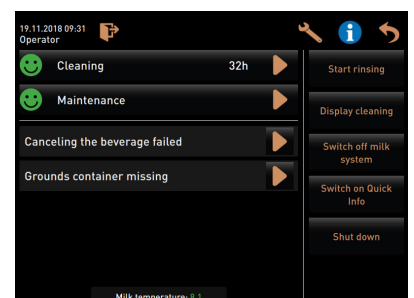

Bootloader [Copy Dump to USB]

The [Copy Logs] field in the bootloader is replaced by the [Copy Dump to USB] field. The function remains the same.

All log book entries are copied on an inserted USB stick.

- ▶ Lift user panel.
- ▶ Insert USB stick.
- ▶ Press the "Copy logs to USB" field [H].
- ▶ Copies logbook entries of the machine software from the last 10 days of operation.

