

T.I. No.: 2021-07 Updated: -	Topic: Operating system version BSP41
---	--

Date: 30.03.2021	Priority	Need for action
Affected machines: SC Club	High	As soon as possible
From serial number: -	X Medium	X On next visit to the machine
As of date: immediately	Low	FYI

REASON FOR CHANGES

Optimization

- Additional currency symbols implemented

With the new BSP software version, the font with currency symbols has been updated.

Additional currency symbols are available (e.g. Turkish Lira and Russian Rubles), which are now displayed on machines with accounting units.

ADVICE FOR TECHNICIANS

The operating system update of the 1100S will be carried out automatically during booting of the machine via a USB stick.

Important note:

After the installation has been completed and the USB stick has been removed, the operating system update will be completed the first time the device is switched on. This process takes up to 2 minutes. The display will be switched off several times during this process.

The new operating system software has been put to the test in the course of extensive internal approval tests and a field test.


We recommend at machines in the field during your next customer visit to check the operating system software version on the front panel and if required to carry out an update to version BSP41.

OPTIMIZATIONS

Check of operating system software:

Under

Info > Service you can check the currently installed BSP version.

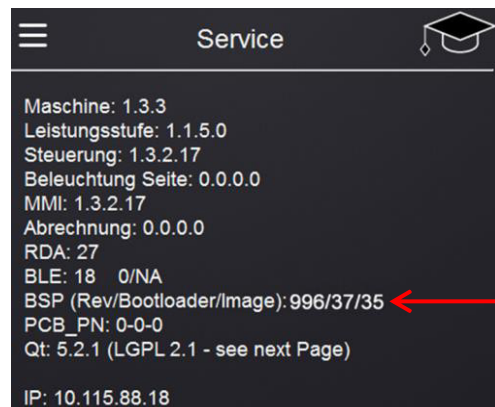

The last digits indicate the version of the operating system software (in the example BSP35)

Update operating system software:


1. Copy the self-extracting zip-file „1120_BSP_41.exe“ onto a USB stick and unpack them by double clicking on the USB stick drive.
2. The folders “1120” and “BSP” will be created on the USB stick. and in both folders the new BSP version will be stored.

Note:

Depending on the current version on the front panel, the version from one of the two folders is automatically selected for the update


- before BSP40 >> the update is done from the folder “1120”
- BSP40 or higher >> the update is done from the folder “BSP”

3. Switch OFF machine
4. Plug USB stick into machine.
5. Switch ON machine
6. Start update with „YES“. The update takes about 1 minute

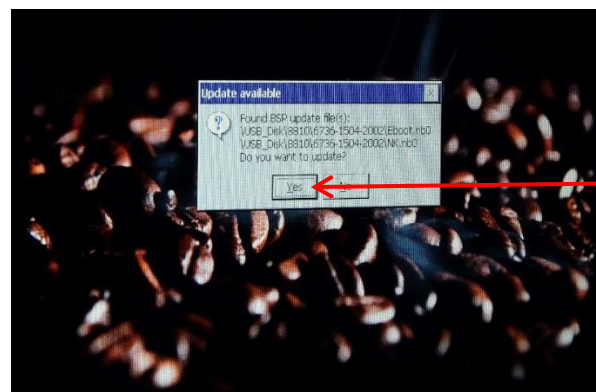


Start operating system update by

7. Do NOT switch machine off and do NOT remove USB stick during update process

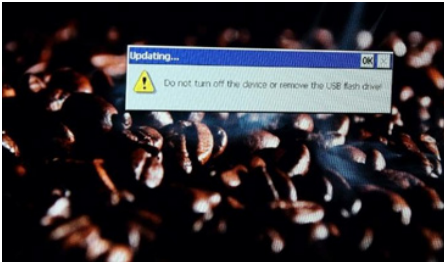

8. After successful update, the message „Update successful. A manual reboot.....” will appear, afterwards switch machine off HARD, i.e. keep ON/OFF switch pressed for longer than 5 sec until the machine switches off.

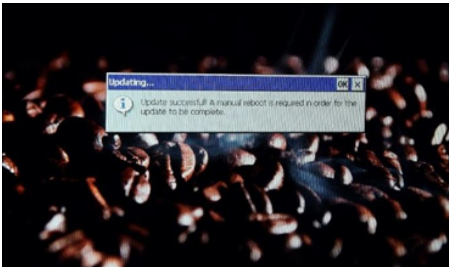

Advice:

As the machine does not continue the boot process after the BSP update, it must be switched off HARD or the machine must be disconnected from the mains supply.

9. Remove USB stick
10. Switch ON machine again

IMPORTANT ADVICE

After the installation has been completed and the USB stick has been removed, the operating system update will be completed the first time the device is switched on. This process takes up to 2 minutes. The display will be switched off several times during this process.

As long as the folders "1120" and "BSP" are on the plugged in USB stick the automatic operating system update will restart again during each booting process.

This means that, for example, after a machine software update the BSP update routine will restart – as here an automatic boot process is carried out.

Alternatively, there are two further possibilities:

- Cancel the BSP update in step 6 by „NO”
- Save file with BSP version, separately from the machine software, on a separate USB stick and use this in future only for BSP updates.

