

T.I. no.: 2017 - 05 Updated: -	Topic: AHA lubrication plan
---	------------------------------------


Date: 21.03.2017	Priority	Need for action
Affected machines: SCA P BF	High	As soon as possible
From serial number: -	Medium	On next visit to the machine
As of date: -	X Low	X FYI only

CORRECT LUBRICATION OF AHA

The guide (red) is self-lubricating. Adding extra lubrication gums up the guide, causing it to jam. Never add extra lubrication to the guide.

During service work, however, the guide (red) should be cleaned of contamination (e.g. deposited milk foam, ground coffee dust) with a dry towel.

In the AHA of the SCA P BF, only the spindle (green) and the spindle gear should be lubricated. Use Polylub GLY801 (part no. 065303) for lubrication.

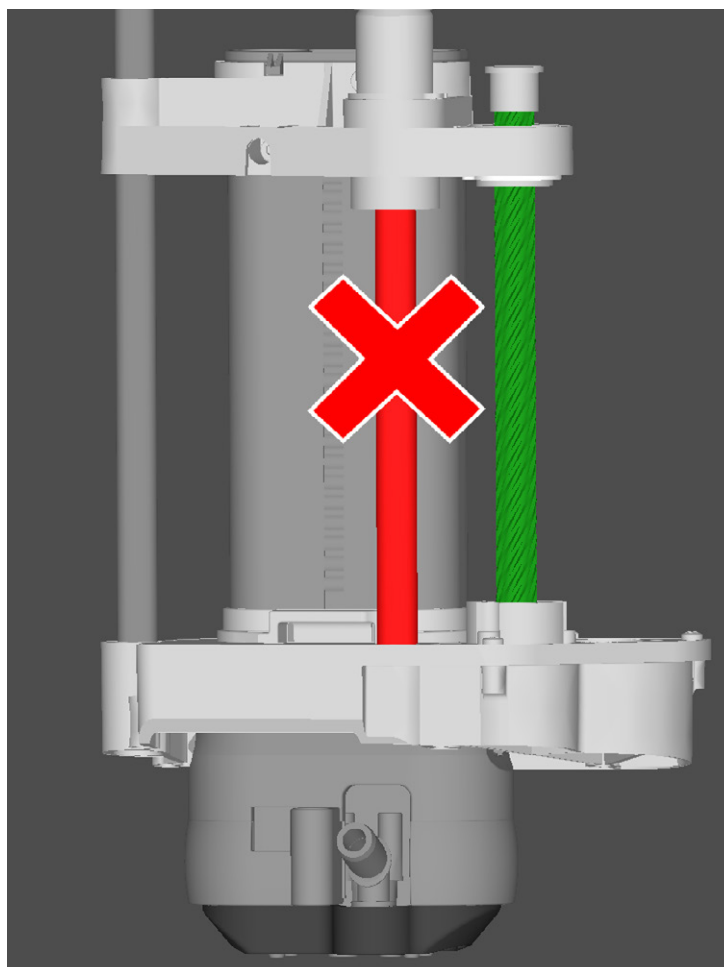

(EN) This page is intentionally left blank.

(DE) Diese Seite wurde absichtlich frei gelassen.

(FR) Cette page est laissée vide intentionnellement.

(ES) Esta página se dejado en blanco intencionalmente.