

T.I. no.: 2017 - 10 Updated: -	Topic: SCA P Best Foam™ switching valve
---	--

Date: 19/7/2017
Affected machines: SCA P Best Foam™
From serial number: -
As of date: 1/4/2017

Priority
High
Medium
X Low

Need for action
As soon as possible
On next visit to the machine
X FYI only

Description of the problem

The switching valve including the holder was rotated by 180°. The cable connections from the cable harness to the switching valve are therefore too short. The cable harness has been adjusted accordingly.


Machines with unadjusted cable harness

The new holder as well as an extension cable are required for replacing the switching valve.


IMPORTANT NOTICE

For machines produced before 1/3/2017, the spare parts listed below must be ordered to replace the switching valve.

Installation of switching valve up to 1/3/2017

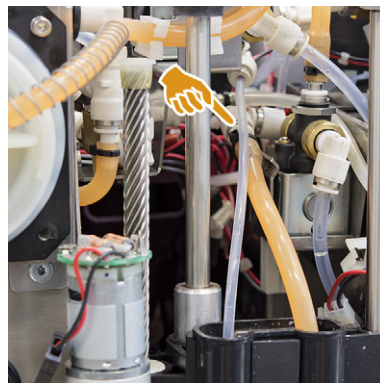


Installation of switching valve from 1/4/2017

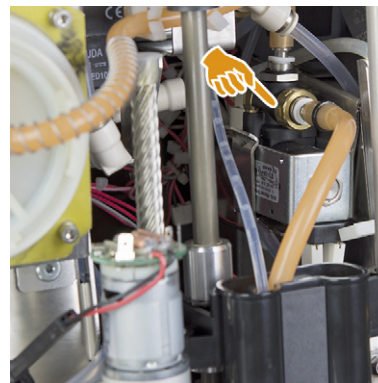

Spare parts for switching valve

The following spare parts must be ordered for the replacement of the switching valve:

- [A] 074412 Switching valve holder
- [A1] 1008022 Threaded pin screw M4x6
- [B] 074440 Switching valve
- [C] 072052 Extension cable

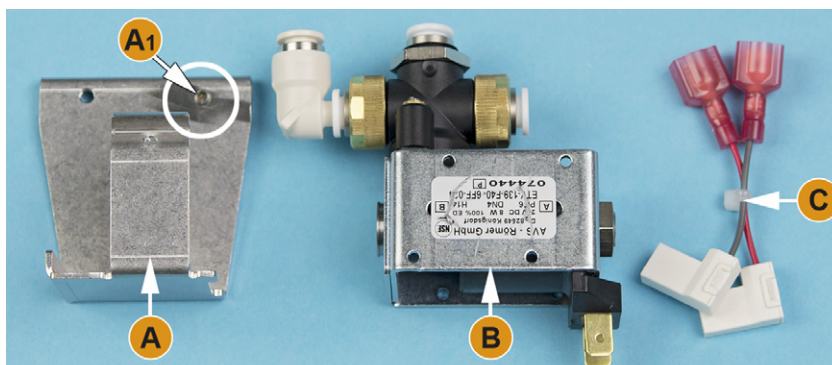

(EN) This page is intentionally left blank.

(DE) Diese Seite wurde absichtlich frei gelassen.

(FR) Cette page est laissée vide intentionnellement.

(ES) Esta página se dejado en blanco intencionalmente.